

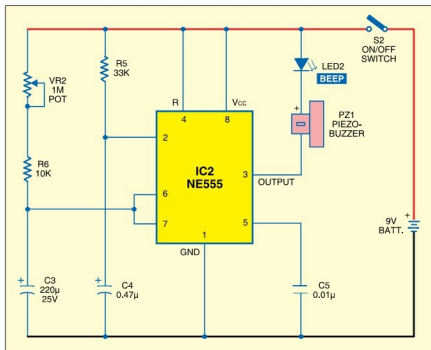


Fig. 2: Timer circuit

a slight tingling sensation.

Fig. 2 shows the timer circuit. It

uses IC NE555 wired in monostable mode. Initially, when you press

switch S2, the monostable triggers and its output goes high for 10 minutes. Thereafter, its output goes low to give a beep sound from the piezobuzzer and lights up the red LED (LED2) indicating that stimulation time is over.

Assemble the timer with a separate switch and a 9V DC battery in the same cabinet as the stimulator. Tape the electrodes to the skin at opposite ends of the chosen muscle and rotate VR1 knob slowly until you sense light itching when the muscle stimulation circuit is powered on. At the same time, flip switch S2 to start the timer for counting the time. At the end of the timing cycle, the piezobuzzer beeps. Each session should last about 10 minutes.

Caution. Heart patients and pregnant women should not use this device. Also, do not attach electrodes to burns, cuts, wounds or any injury. Consult your physician before using this circuit. ●

FRONTLINE ELECTRONICS

**India's 8051 In Circuit Emulators
for the World Market!**

Low Cost. State of Art. Rich Features.



Frontline Electronics Pvt. Ltd.,

Pandian Street, Alagapuram, Salem - 030 010, Tamilnadu, India.
Phone : 0091 427 - 244 9238/320 9844. Fax: 0091 427 - 243 1312.
Email : fepl@im@frontlineemail.com

www.Frontline-Electronics.com



Battery Packs for Portable Equipments



Manufacturers and Exporters of

- Battery packs (Li-ion & NiMH)
- Battery Chargers ● Power Adaptors

Applications:

- Bus Ticketing Machines
- Bank cards swiping terminals
- Medical Equipments ● Mobile phones
- PDAs ● GPS transmitters
- Other Custom built portable equipments
- FW Telephone

ISO 9001:2000 certified since 9 years. Exporting to USA & Europe. OEM suppliers to major Portable equipment manufacturers. We build Battery packs as per customer's requirement. We support Li-ion, Li-Polymer, NiMH and Ni-Cad Chemistries.

Contact for further details :
RAJAMANE ELECTRIC PVT. LTD.
3, Doddanokundi Indl. Area,
Mahadevapura, Bangalore - 560048.
Ph: 080-28524249 / 28524257,
Fax: 080-28524284.
E-mail: sales@rajamanetelectric.com
Visit us: www.rajamanetelectric.com