

Rotation Counter

S.C. DWIVEDI

Presented here is a simple rotation counter which helps you measure the revolutions per minute (rpm) of any rotating object. As the project requires measurement of very

high rpm, a fast-switching device like a reed switch is used. A small round magnet is mounted on the blade as

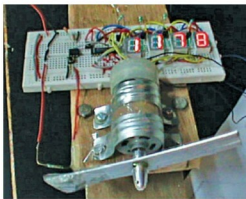


Fig. 1: Working prototype of rotation counter

shown in Fig. 1 to activate the reed switch on each rotation. The circuit has been successfully tested up to 6000 rpm but it can measure even beyond that.

Circuit and working

The circuit diagram of rotation counter is shown in Fig. 2. The circuit is built around 5V regulator 7805 (IC1), an opto-coupler MCT2E (IC2), 4-digit counter with 7-segment display driver 74C926 (IC3), four common-cathode 7-segment displays LTS543 (DIS1-

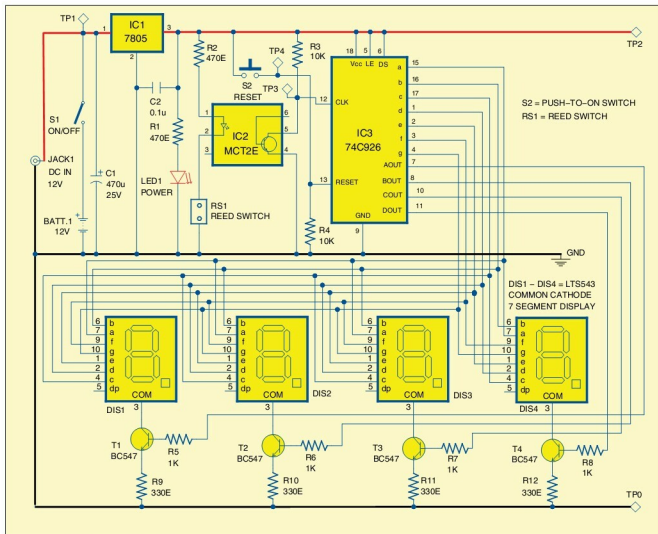


Fig. 2: Circuit diagram of rotation counter

