

option from the desktop of your Windows operating system.

As you can see in Fig. 1, there is an 'Acer' logo of the manufacturer and a 'support information' button. Clicking this button displays support information such as helpline number, website and e-mail of the manufacturer as shown in Fig. 2.

Support information is optional but if you want to add this information to system properties, save it in 'System32' folder as the oeminfo.ini file under 'Windows' folder. The system stores OEM information in the .ini file in the following format:

```
General section:
[General]
Manufacturer=<text>
Model=<text>

Support information section:
Line1=<some text>
Line2=<more text>
Line3=<more text>
.
.
LineN=<more text>
```

The number and length of lines in the support information is limited only by the general limitation of '.ini' files.

## Designing the OEM logo

The logo should be a 256-colour Windows bitmap (bmp) file having a size of 96 pixels when using small fonts in 'Display Property' setting or 120 pixels with large fonts. Save the bitmap file in 'System32' folder as 'oemlogo.bmp'.

## Designing Visual Basic form

Launch Microsoft Visual Studio 2005 from your desktop. Select 'New Project' from 'File' and proceed as follows:

1. Select the project type as 'Windows' under Visual Basic and the template as 'Windows Application.'
2. Enter the name as 'OEMCreator.'
3. Click 'Ok' to create the solution.
4. By default, you will see Form1 displayed on the Visual Basic screen. Select the form and change the properties as follows:

```
Name=frmMain
```

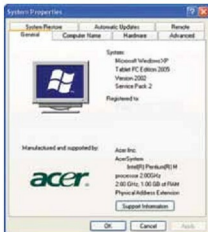


Fig. 1: Typical example of OEM logo in an Acer computer

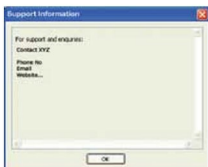


Fig. 2: Screenshot of the support information window



Fig. 3: tabPageGeneral

```
FormBorderStyle=FixedSingle
MaximizeBox=False
MinimizeBox=False
Size= 338, 354
StartPosition= CenterScreen
Text= OEM Logo Maker v1.0
```

5. Add a TabControl and set the name property to tabControlMain.



Fig. 4: tabPageSupport



Fig. 5: tabPageLogo



Fig. 6: System properties before creating the logo

Now add three TabPages and set the properties as:

```
TabPage1 - Name= tabPageGeneral,
Text: General Information
TabPage2 - Name= tabPageSupport,
Text: Support Information
```